



Fittings

HOSE BARB SPLICERS



Model No.	Hose I.D."	Price/Each
TA492	1/4	
TA493	5/16	
TA494	3/8	
TA495	1/2	
TA496	5/8	
TA497	3/4	

HOSE BARB TO FEMALE PIPE CONNECTORS



Model No.	Hose I.D."	Thread (F) NPT	Price /Each
TZ072	1/4	1/8	
TA502	1/4	1/4	
TZ073	5/16	1/4	
TA503	3/8	1/4	
TA504	3/8	3/8	
TA505	1/2	1/2	

HOSE BARB COUPLERS TO FEMALE BALL END



Model No.	Hose I.D."	Thread (F) NPT	Price /Each
TZ098	1/4	1/4	
TZ100	5/16	1/4	
TZ101	3/8	1/4	
TZ102	3/8	3/8	

HOSE BARB COUPLERS FLAT SEAT WITH GASKET



Model No.	Hose I.D."	Thread (F) NPT	Price /Each
TZ105	1/4	1/4	
TZ106	5/16	1/4	
TZ107	3/8	1/4	
TZ108	3/8	3/8	
TZ109	1/2	1/2	

HOSE BARB TO MALE PIPES



Model No.	Hose I.D."	Thread (M) NPT	Price /Each
TZ075	1/8	1/8	
TZ076	3/16	1/8	
TA498	1/4	1/8	
TA499	1/4	1/4	
TZ077*	1/4	1/4	
TZ078	1/4	3/8	
TZ079	5/8	3/8	
TZ080	5/8	1/2	
TZ081	5/8	3/4	
TZ083	5/16	1/4	
TZ084	3/8	1/8	
TA500	3/8	1/4	
TZ085*	3/8	1/4	
TA501	3/8	3/8	
TZ086*	3/8	3/8	
TZ087	3/8	1/2	
TZ088	1/2	1/4	
TZ089	1/2	3/8	
TZ090	1/2	1/2	
TZ091*	1/2	1/2	
TZ092	1/2	3/4	
TZ093	3/4	1/2	
TZ094	3/4	3/4	
TZ095	1	3/4	
TZ096	1	1	

*Swivel

REUSABLE HOSE FITTINGS



Model No.	Hose O.D."	Hose I.D."	Thread (M) NPT	Price /Each
TZ110	1/2	1/4	1/4	
TZ111	9/16	1/4	1/4	
TZ112	5/8	1/4	1/4	
TZ115	9/16	5/16	1/4	
TZ119	5/8	3/8	1/4	
TZ120	5/8	3/8	3/8	
TZ121	11/16	3/8	1/4	
TZ123	3/4	3/8	1/4	
TZ128	7/8	1/2	1/2	

Unimax 5-in-1 Universal Couplers

UNIVERSAL INTERCHANGE ACCEPTS:

- Ultraflo
- ARO 210
- Lincoln
- 1/4 Industrial
- 1/4 Truflate
- Automatic push-to-connect operation
- Sleeve guard protects against accidental disconnection when the coupler is dragged on the floor or over obstructions
- Deep knurled socket sleeve for positive gripping




Model No.	Mfg. No.	NPT	Price/Each
FEMALE THREAD			
TKZ830	20.441	1/4	
MALE THREAD			
TKZ831	20.641	1/4	

TOPRING

Unisafe Universal 5-in-1 Interchange Safety Couplers

UNIVERSAL INTERCHANGE ACCEPTS:


- Ultraflo
- ARO 210
- Lincoln
- 1/4 Industrial
- 1/4 Truflate
- Valve sleeve is operated independently of locking sleeve
- When the valve sleeve is moved to shut off air flow downstream pressure is automatically vented
- Disconnection and connection are performed easily at zero pressure
- Automatic push-to-connect operation

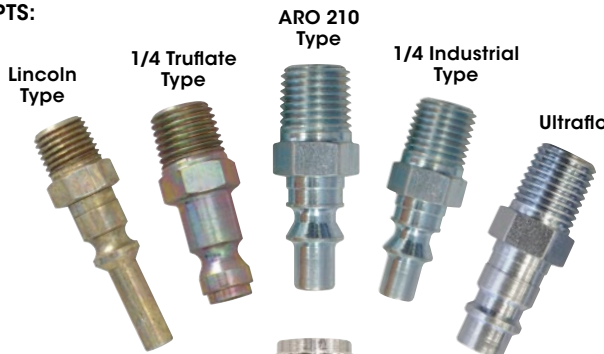

Model No.	Mfg. No.	NPT	Price/Each
FEMALE THREAD			
TGA093	20.448	1/4	
MALE THREAD			
TGA098	20.648	1/4	

TOPRING

SAFETY COMES FROM 2-STEP DISCONNECTION:

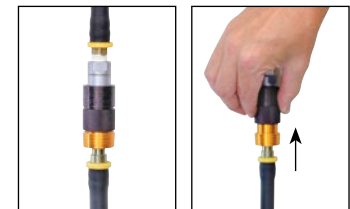

Male/female connected set



Slide the black sleeve to release downstream pressure



Slide the gold sleeve to release plug



Disconnection

